

# HT82M938T/HT82M938R 27MHz 3D PS2 Mouse Controller

#### **Features**

- Compatible with Microsoft Windows 2000 and 5-Button Wheel Mouse
- Compatible with Microsoft Intelli 3D PS/2 and IBM PS/2 mouse compatible
- Supports rolling buttons in 3D PS/2 mouse mode
- Supports five buttons (R,M,L,B4,B5) and three axes (X,Y,Z)input
- Z axis can support optomechanical and mechanical scroller input
- Crystal oscillator system frequency 6MHz for transmitter and 6MHz for receiver
- 27MHz Single Channel with 8 ID Code
- Transmitter 20-pin SOP and receiver 16-pin SOP package


#### **General Description**

The HT82M938T/HT82M938R is a Plug & Play 27MHz RF 5 Buttons 3D PS/2 mouse controller transmitter and receiver. It is compatible with Microsoft Intelli 3D PS/2


Wheel Mouse. The operation of the Z axis can support optomechanical and mechanical scroller input.

## **Pin Assignment**

#### **Transmitter**

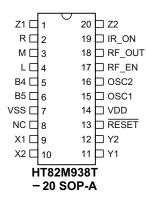

#### Receiver

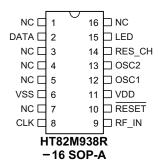

#### **Pin Description**

#### **Transmitter**

Pin No.	Pin Name	I/O	Description
1, 20	Z1, Z2	ı	Z-axis input supports two kinds of scroller input; optomechanical and mechanical.
2, 3, 4, 5, 6	R, M, L, B4, B5	ı	Input ports with pull-high $12k\Omega$ resistor. These pads can function as Left, Right, Middle, B4 and B5 button lines.
7	VSS	_	Negative power supply, ground
9, 10	X, X2	I	X-axis photo input
11, 12	Y1, Y2	I	Y-axis photo input
13	RESET	I	Chip reset input, low active
14	VDD	_	5V positive power supply
15	OSC1	I	6MHz OSC input
16	OSC2	0	6MHz OSC output

Rev. 1.30 1 October 29, 2002



Pin No.	Pin Name	I/O	Description
17	RF_EN	0	RF module enable
18	RF_OUT	0	RF data output
19	IR_ON	0	X, Y, Z photo input power control

## Receiver

Pin No.	Pin Name	I/O	Description			
2	DATA	I/O	PS/2 mouse "DATA" line with pull-high 12kΩ resistor			
6	VSS	_	Negative power supply, ground			
8	CLK	I/O	PS/2 mouse "CLOCK" line with pull-high 12k $\Omega$ resistor			
9	RF_IN	1	RF data input			
10	RESET	ı	Chip reset input, low active			
11	VDD	_	5V positive power supply			
12	OSC1	1	6MHz OSC input			
13	OSC2	0	6MHz OSC output			
14	RES_CH	ı	Channel select reset switch with pull-high 12kΩ resistor			
15	LED	0	Data transfer and change channel mode display LED			

## **Electrical Characteristics**

#### Transmitter

Sumbal	Parameter		Test Conditions	Min.	Time	N4	11
Symbol			Conditions	wiin.	Тур.	Max.	Unit
$V_{DD}$	Operating Voltage	_	_	2.4	_	5.5	V
I <sub>DD</sub>	Operating Current (Crystal OSC)	3V	No load, f <sub>SYS</sub> =6MHz	_	0.7	1.5	mA
I <sub>STB</sub>	Standby Current	3V	No load, system HALT	_	_	8	μА
V <sub>IL</sub>	Input Low Voltage (X1, X2, Y1, Y2, Z1, Z2, R, M, L, B4, B5)	3V	_	0	_	1	٧
V <sub>IH</sub>	Input High Voltage (X1, X2, Y1, Y2, Z1, Z2, R, M, L, B4, B5)	3V	_	2.1	_	3	V
V <sub>IL1</sub>	Input Low Voltage (RESET)	3V	_	0	_	0.7	V
V <sub>IH1</sub>	Input High Voltage (RESET)	3V	_	2.5	_	3	V

#### Receiver

Comple al	Parameter		Test Conditions	Min	Trees	N4	Unit
Symbol			Conditions	Min.	Тур.	Max.	
$V_{DD}$	Operating Voltage	_	_	2.4	_	5.5	V
I <sub>DD</sub>	Operating Current (Crystal OSC)	5V	No load, f <sub>SYS</sub> =6MHz	_	2	5	mA
I <sub>STB</sub>	Standby Current	5V	No load, system HALT	_	_	15	μА
V <sub>IL</sub>	Input Low Voltage (RES_CH)	5V	_	0	_	1.5	V
V <sub>IH</sub>	Input High Voltage (RES_CH)	5V	_	3.5	_	5	٧
V <sub>IL1</sub>	Input Low Voltage (RESET)	5V	_	0	_	1.3	V
V <sub>IH1</sub>	Input High Voltage (RESET)	5V	_	4.1	_	5	V

Rev. 1.30 2 October 29, 2002



## **Functional Description**

#### Change ID procedure

- First press Receiver RESET key, the LED will blink very quickly.
- Now press Transmitter L, M, R button at least 3-minutes, the mouse will jump to change ID mode and output a change ID signal to the receiver.
- At the same time, the LED of the Receiver will blink slowly to wait the change ID information.
- The user can decide which ID to be changed by pressing M button. If the user wants to change ID to 4, just press the M button four time (This mouse support 8 ID).
- After deciding the ID number, the user can easy return to normal mode by pressing the L or R button once.
- After the Receiver receive the END signal of the change ID, the LED will no longer blink and the Receiver returns to normal mode.

#### PS/2 mouse

• PS/2 status byte

Bit

7: RESERVED

6: 0=STREAM MODE, 1=REMOTE MODE

5: 0=DISABLED, 1=ENABLED

4: 0=SCALING 1:1, 1=SCALING 2:1

3: RESERVED

2: 1=LEFT BUTTON PRESSED

1: 1=MIDDLE BUTTON PRESSED

0: 1=RIGHT BUTTON PRESSED

Standard PS/2 data format

Variable rps, 0, 8, 1, bidirectional synchronous.

Bit No.	7	6	5	4	3	2	1	0
1st word	ΥV	XV	YS	XS	1	М	R	L
2nd word	X7	X6	X5	X4	Х3	X2	X1	X0
3rd word	Y7	Y6	Y5	Y4	Y3	Y2	Y1	Y0

· Data format for 3D PS/2

Variable rps, 0, 8, 1, bidirectional synchronous.

Bit No.	7	6	5	4	3	2	1	0
1st word	ΥV	ΧV	YS	XS	1	М	R	L
2nd word	X7	X6	X5	X4	Х3	X2	X1	X0
3rd word	Y7	Y6	Y5	Y4	Y3	Y2	Y1	Y0
4th word	Z7	Z6	Z5	Z4	Z3	Z2	Z1	Z0

Note: The X/Y data report is 9-bit 2's complement

The Z data report is 8-bit 2's complement

X movement towards the right is positive, movement towards the left is negative

Y upward movement is positive, moving down is negative

Z rolling towards the user is positive, else negative

Button status: 1=pressed, 0=released

- Mouse mode changes between standard and 3D PS/2 mode
  - Sending the commands in the following sequence will set the mouse to 3D PS/2 mode.

Command	Response from mouse
F3h	FAh
C8h	FAh
F3h	FAh
64h	FAh
F3h	FAh
50h	FAh
F2h	Fah

- Any time the PC sends a reset 'FFh' command to the mouse, it will reset the mouse to standard PS/2 mode.
- After power-on reset is initiated, the mouse is set to standard PS/2 mode.

 
5-button wheel mouse mode follows the 5-button activation method of Windows 2000 and 5-button wheel mouse specification.



## **Timing Diagrams**


## X, Y, Z input


• X, Y Axis photo-coupler cross width



For X, Y-axis  $t_R$ ,  $t_F$ >100 $\mu$ s; For Z-axis  $t_R$ ,  $t_F$ >1ms


## • X/Y/Z Axis counting

 

 

#### PS/2 mouse

 • Data output




	Timing Parameter	Min/Max
T1	Data transition to the falling edge of CLOCK	5/25 μsec
T2	Rising edge of CLOCK to DATA transition	5/T4-5 μsec
Т3	Duration of CLOCK low	30/50 μsec
T4	Duration of CLOCK high	30/50 μsec
T5	Minimum time to MOUSE inhibit after clock 11	>0 µsec
T6	Maximum time to MOUSE inhibit after clock 11 to ensure MOUSE does not start another transmission	<50 μsec

Rev. 1.30 4 October 29, 2002




## • Data input

 

	Timing Parameter	Min/Max
T7	Duration of CLOCK low	30/50 μsec
T8	Duration of CLOCK high	30/50 μsec
Т9	Time from low to high CLOCK transition to time when MOUSE samples DATA line	5/25 usec

## **Application Circuits**

## Transmitter application (This application circuit is for reference only)

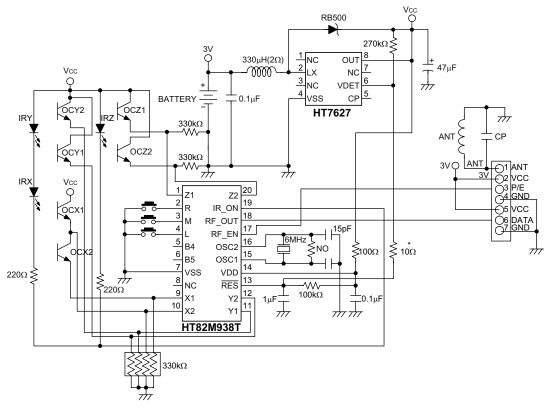


Note: \*  $10\Omega$  is placed if HT7627 is used to reset HT82M938T


Rev. 1.30 5 October 29, 2002



## Receiver application (This application circuit is for reference only)

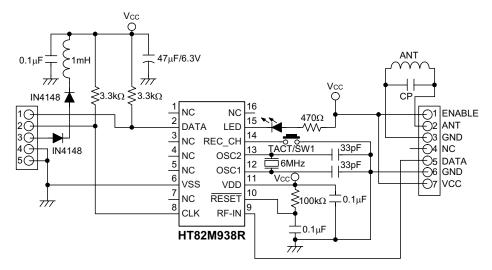


#### RF transmitter modules

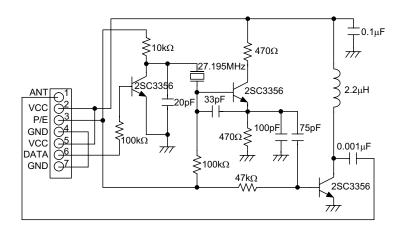

Rev. 1.30 6 October 29, 2002



#### RF receiver modules

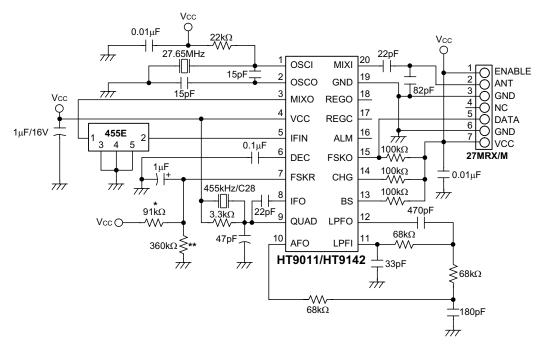


Note: For HT9011: place \*, \*\*open For HT9142: place\*\*, \*open


Rev. 1.30 7 October 29, 2002



## **Package Information**
 
## 20-pin SOP (300mil) outline dimensions

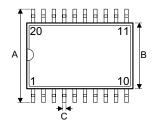







Symbol	Dimensions in mil						
	Min.	Nom.	Max.				
А	394	_	419				
В	290	_	300				
С	14	_	20				
C'	490	_	510				
D	92	_	104				
E	_	50	_				
F	4	_	_				
G	32	_	38				
Н	4	_	12				
α	0°	_	10°				

Rev. 1.30 8 October 29, 2002



## 16-pin SOP (300mil) outline dimensions

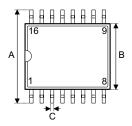

 




Symbol	Dimensions in mil						
	Min.	Nom.	Max.				
Α	394	_	419				
В	290	_	300				
С	14	_	20				
C'	390	_	413				
D	92	_	104				
E	_	50	_				
F	4	_	_				
G	32	_	38				
Н	4	_	12				
α	0°	_	10°				

Rev. 1.30 9 October 29, 2002



## **Product Tape and Reel Specifications**

## Reel dimensions

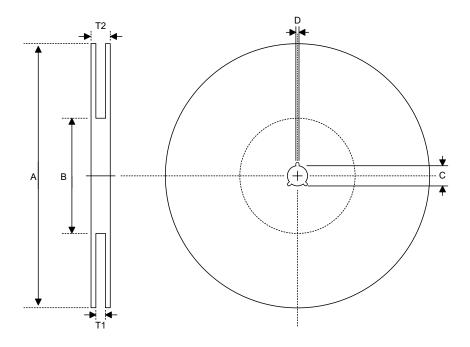

## SOP 20W

Symbol	Description	Dimensions in mm
Α	Reel Outer Diameter	330±1.0
В	Reel Inner Diameter	62±1.5
С	Spindle Hole Diameter	13.0+0.5 -0.2
D	Key Slit Width	2.0±0.5
T1	Space Between Flange	24.8+0.3 -0.2
T2	Reel Thickness	30.2±0.2


## SOP 16W (300mil)

Symbol	Description	Dimensions in mm
Α	Reel Outer Diameter	330±1.0
В	Reel Inner Diameter	62±1.5
С	Spindle Hole Diameter	13.0±0.5 -0.2
D	Key Slit Width	2.0±0.5
T1	Space Between Flange	16.8+0.3 -0.2
T2	Reel Thickness	22.2±0.2

Rev. 1.30 October 29, 2002



## Carrier tape dimensions

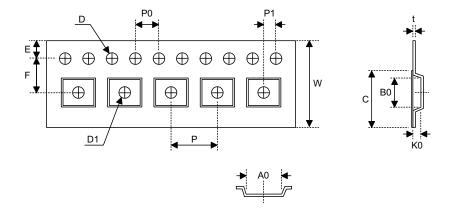

## SOP 20W

Symbol	Description	Dimensions in mm
W	Carrier Tape Width	24.0+0.3 -0.1
Р	Cavity Pitch	12.0±0.1
Е	Perforation Position	1.75±0.1
F	Cavity to Perforation (Width Direction)	11.5±0.1
D	Perforation Diameter	1.5+0.1
D1	Cavity Hole Diameter	1.5+0.25
P0	Perforation Pitch	4.0±0.1
P1	Cavity to Perforation (Length Direction)	2.0±0.1
A0	Cavity Length	10.8±0.1
В0	Cavity Width	13.3±0.1
K0	Cavity Depth	3.2±0.1
t	Carrier Tape Thickness	0.3±0.05
С	Cover Tape Width	21.3

## SOP 16W (300mil)

Symbol	Description	Dimensions in mm
W	Carrier Tape Width	16.0±0.2
Р	Cavity Pitch	12.0±0.1
E	Perforation Position	1.75±0.1
F	Cavity to Perforation (Width Direction)	7.5±0.1
D	Perforation Diameter	1.5+0.1
D1	Cavity Hole Diameter	1.5+0.25
P0	Perforation Pitch	4.0±0.1
P1	Cavity to Perforation (Length Direction)	2.0±0.1
A0	Cavity Length	10.9±0.1
В0	Cavity Width	10.8±0.1
K0	Cavity Depth	3.0±0.1
t	Carrier Tape Thickness	0.3±0.05
С	Cover Tape Width	13.3

Rev. 1.30 11 October 29, 2002



#### Holtek Semiconductor Inc. (Headquarters)

No.3, Creation Rd. II, Science-based Industrial Park, Hsinchu, Taiwan

Tel: 886-3-563-1999 Fax: 886-3-563-1189 http://www.holtek.com.tw

#### Holtek Semiconductor Inc. (Sales Office)

11F, No.576, Sec.7 Chung Hsiao E. Rd., Taipei, Taiwan

Tel: 886-2-2782-9635 Fax: 886-2-2782-9636

Fax: 886-2-2782-7128 (International sales hotline)

#### Holtek Semiconductor (Shanghai) Inc.

7th Floor, Building 2, No.889, Yi Shan Rd., Shanghai, China

Tel: 021-6485-5560 Fax: 021-6485-0313 http://www.holtek.com.cn

#### Holtek Semiconductor (Hong Kong) Ltd.

Block A, 3/F, Tin On Industrial Building, 777-779 Cheung Sha Wan Rd., Kowloon, Hong Kong Tel: 852-2-745-8288

Tel: 852-2-745-8288 Fax: 852-2-742-8657

#### Holmate Semiconductor, Inc.

46712 Fremont Blvd., Fremont, CA 94538

Tel: 510-252-9880 Fax: 510-252-9885 http://www.holmate.com

#### Copyright © 2002 by HOLTEK SEMICONDUCTOR INC.

The information appearing in this Data Sheet is believed to be accurate at the time of publication. However, Holtek assumes no responsibility arising from the use of the specifications described. The applications mentioned herein are used solely for the purpose of illustration and Holtek makes no warranty or representation that such applications will be suitable without further modification, nor recommends the use of its products for application that may present a risk to human life due to malfunction or otherwise. Holtek's products are not authorized for use as critical components in life support devices or systems. Holtek reserves the right to alter its products without prior notification. For the most up-to-date information, please visit our web site at http://www.holtek.com.tw.