

### Technical Note

#### Speaker / Headphone Amplifier Series

## Stereo Headphone Amplifiers

BH3541F, BH3544F, BH3547F, BH3548F



No.09077EAT01

#### Description

BH3541F, BH3544F, BH3547F, BH3548F is headphone amplifiers suitable for portable products.

BH3541F has a fixed gain of 0 dB and BH3544F, BH3547F, BH3548F has a fixed gain of 6 dB.

External resistors for gain setting are not needed. Package of BH3541F, BH3544F, BH3547F, BH3548F is pin-to-pin compatible (SOP8), enable to replace each other easily.

BH3541F, BH3544F, BH3547F, BH3548F also has mute functions that make it easy to prevent pop noise when power supply turns on/off. Moreover, thermal shutdown function is built-in.

BH3541F, BH3544F, BH3547F can drive 16/32 $\Omega$  load, BH3548F can drive 8/16/32 $\Omega$ . So, BH3548F is suitable for 8 $\Omega$  receiver.

#### Features

- 1) Built-in mute function for preventing pop noise when power supply turns on/off
- 2) Built-in thermal shutdown function
- 3) BH3541F, BH3544F, BH3547F, BH3548F are pin-to-pin compatible
- 4) SOP8 small package

#### Applications

TV, Desktop PC, Notebook PC, Camcorder and other equipment having headphone output

#### Line up

Part No.	BH3541F	BH3544F	BH3547F	BH3548F	Unit
Supply voltage	+2.8 ~	+6.5	+4.5 ~ +5.5	+4.0 ~ +5.5	V
Quiescent current	7.0	)	3.7	6.5	mA
Amplifier gain	0		6		dB
Output [R∟=16Ω]	62		77	62	mW
load impedance		16 / 32		8/16/32	Ω
Operating temperature range		-25 ~ +75		-40 ~ +85	°C

#### ●Absolute maximum ratings (Ta=25°C)

Symbol	Limit	Linit	
Symbol	BH3541F,BH3544F,BH3547F,BH3548F	Unit	
VCC	7.0	V	
Pd	550 <sup>*1</sup>	mW	
Tstg	-55~+125	°C	
	Pd	Symbol BH3541F,BH3544F,BH3547F,BH3548F   VCC 7.0   Pd 550 <sup>*1</sup>	

\*1 Derating is done at 5.5mW/°C above Ta=25°C. (When mounted on a 70mm×70mm×1.6mm PCB board, FR4)

#### •Operating conditions (Ta=25°C)

Parameter	Symbol	BH3541F,BH3544F	BH3547F	BH3548F	Unit
Supply voltage	VCC	+2.8 ~ +6.5	+4.5 ~ +6.5	+4.0 ~ +5.5	V
Temperature Range	Topr	-25~-	+75	-40 ~ +85	°C

These product are not designed for protection against radioactive rays.

#### Electrical characteristics (Unless otherwise noted, Ta=25°C,VCC=5V,RL=32Ω,f=1kHz,BW=400~30kHz BH3541F : VIN=0dBV, BH3544F, BH3547F, BH3548F : VIN =-6dBV)

	,							
Parameter	Symbol	BH3541F BH3544F		BH3547F	BH3548F	Unit	Conditions	
Quiescent current	IQ	7 3.7 6.5 mA VIN=0Vrms		VIN=0Vrms				
Mute pin control voltage H	Vтмн		1.	6<		V	Mute OFF	
Mute pin control voltage L	VTML		<(	).3		V	Mute ON	
Gain	Gvc	0		6		dB	-	
Gain difference between channels	∆Gvc			0		dB	-	
Total harmonic distortion	THD	0.	02	0.05	0.02	%	BW=20~20kHz	
Rated output 1	Po1	3	31	46	31	mW	R∟=32Ω,THD<0.1% (BH3541F,BH3544F,BH3548F) R∟=32Ω,THD<0.3% (BH3547F)	
Rated output 2	Po2	6	62	77	62	mW	RL=16Ω,THD<0.1% (BH3541F,BH3544F,BH3548F) RL=16Ω,THD<0.5% (BH3547F)	
Rated output 3	Роз		-		120	mW	R∟=8Ω,THD<0.25% (BH3548F)	
Output noise voltage	VNO		-(	93		dBV	BW=20~20kHz,Rg=0Ω	
Channel separation	CS	-!	90	-87	-90	dB	Rg=0Ω	
Mute attenuation	ATT		-8	30		dB	Rg=0Ω	
Ripple rejection	RR		-{	57		dB	frr=100Hz,Vrr=-20dBV	
Input resistance	Rin	180		90		kΩ	-	

#### Reference data







# Reference data (Continued) BH3541F/BH3544F



Fig. 4 Voltage gain vs. frequency



Fig. 5 Total harmonic distortion vs. output voltage (1)

#### BH3541F/BH3544F



Fig. 6 Total harmonic distortion vs. output voltage (2)

BH3541F/BH3544F



Fig. 7 Total harmonic distortion vs. output voltage (3)



Fig. 10 MUTE attenuation vs. frequency



Fig. 8 Total harmonic distortion vs. output voltage (4)





Fig. 9 Channel separation vs. frequency



BH3541F/BH3544F



#### www.rohm.com © 2009 ROHM Co., Ltd. All rights reserved.

#### Block diagram





#### Measurement circuit



( ) are BH3544F, BH3547F, BH3548F values.

Fig. 14

#### Terminal Equivalent Circuit / Description

Pin	Pin	1/0	Pin voltage	Equiva	lent circuit	Function
No.	Name	170	T III Voltage	BH3544F,BH3547F,BH3548F	BH3547F	T unction
1 7	OUT1 OUT2	0	2.1V (VCC=5V)	VCC 1 7 4 10k 7 10k 7 10k 7 10k		Output pin
2	MUTE	I	0.1V (When open)			Mute control pin Mute on : Hi Mute off : Lo (open)
3 5	IN1 IN2	I	2.1V (VCC=5V)	3 5 BIAS	S BIAS	Input pin
6	BIAS	I/O	2.1V (VCC=5V)	6 6 60k 60k 60k 777	CCC TOK BIAS 64k 707 BIAS	Bias pin (Since the 47 µF externally attached capacitor also serves as the time constant for pop noise countermeasures, evaluate adequately when changing it.)
4	GND	I	-	-	-	GND pin
8	VCC	I	-	-	-	Power supply pin

%The figure in the pin explanation and input/output equivalent circuit is reference value, it doesn't guarantee the value.

#### •Application circuit





#### •Description of external components.

1) Input coupling capacitors (C3, C5)

These are determined according to the lower cutoff frequency fc. Moreover, since lowering the capacitance can cause the occurrence of pop noise, when changing this, determine it after adequate checking.

Since the input impedance of the BH3541F is  $180k\Omega$  and that of the BH3544F,BH3547F,BH3548F is  $90k\Omega$ , these are found by the expressions below, although drift, temperature characteristics, and other considerations are necessary. (Layered ceramic capacitors are recommended.)

C3(C5)=1/( $2\pi \times 180 k\Omega \times fc$ ) [BH3541F]

C3(C5)=1/(
$$2\pi \times 90k\Omega \times fc$$
) [BH3544 F,BH3547F,BH3548F]

2) Bias capacitor (C6)

When VCC=5V,  $47\mu$ F is recommended. Since lowering the capacitance too much can cause worsening of electrical characteristics or the occurrence of pop noise, when changing this, determine it after checking this adequately.

3) Mute pin pop noise countermeasures (R2, C2) Since the BH3541F,BH3544F,BH3548F has an impedance of 190kΩ against GND and the BH3547F has 200kΩ, it may be impossible to cancel mute mode if R2 is made too large.

4) Output coupling capacitors (C1, C7)

These are determined by the lower cutoff frequency. If RL is the output load resistance (assuming a resistance Rx is put in for output protection or current restriction), these are found by the expression below.  $C1(C7)=1/(2 \pi \times (RL+R \times ) \times fc)$ 

- 5) Input gain adjustment resistances (R3, R5) (BH3544F,BH3547F) Externally attached resistances (R3, R5) make input gain adjustment possible. The gain found by the expression below can be set.
  - Gvc=6+20log(90kΩ/(90kΩ+R3[R5])) [dB]

When input gain is not accommodated, these resistors have no use.

#### Notes for use

- 1) Numbers and data in entries are representative design values and are not guaranteed values of the items.
- 2) Although we are confident in recommending the sample application circuits, carefully check their characteristics further when using them. When modifying externally attached component constants before use, determine them so that they have sufficient margins by taking into account variations in externally attached components and the Rohm LSI, not only for static characteristics but also including transient characteristics.
- 3) Absolute maximum ratings If applied voltage, operating temperature range, or other absolute maximum ratings are exceeded, the LSI may be damaged. Do not apply voltages or temperatures that exceed the absolute maximum ratings. If you think of a case in which absolute maximum ratings are exceeded, enforce fuses or other physical safety measures and investigate how not to apply the conditions under which absolute maximum ratings are exceeded to the LSI.

#### 4) GND potential

Make the GND pin voltage such that it is the lowest voltage even when operating below it. Actually confirm that the voltage of each pin does not become a lower voltage than the GND pin, including transient phenomena.

5) Thermal design Perform thermal design in which there are adequate margins by taking into account the allowable power dissipation in actual states of use.

- 6) Shorts between pins and misinstallation When mounting the LSI on a board, pay adequate attention to orientation and placement discrepancies of the LSI. If it is misinstalled and the power is turned on, the LSI may be damaged. It also may be damaged if it is shorted by a foreign substance coming between pins of the LSI or between a pin and a power supply or a pin and a GND.
- Operation in strong magnetic fields Adequately evaluate use in a strong magnetic field, since there is a possibility of malfunction.
- 8) Pop noise countermeasures

In order to prevent the pop noise that occurs when the power supply turns ON or OFF, make the rise and fall with reference to the timing diagram shown below.

1)BH3541F/ BH3544F/ BH3548F



- (A) : Mute period (Use as pop noise countermeasure when power supply turns ON/OFF by makingVMUTE=Lo.)
- (B) : Mute cancellation period (This has a time constant because it is used by the externally attached C2 and R2 as a pop noise countermeasure on mute cancellation, so be careful of the timing.)
- (C) : Mute start time (As on cancellation, this has a time constant.)



Fig. 17

- (A) : Before VCC rise (or at the same time as VCC) make mute cancelled (VMUTE=Hi).
- (B) : Soft mute period (This time can be set by externally attached R2 and C2)

www.rohm.com © 2009 ROHM Co., Ltd. All rights reserved.

2)BH3547F

#### Ordering part number



SOP8



	Notes
	g or reproduction of this document, in part or in whole, is permitted without the ROHM Co.,Ltd.
The conter	nt specified herein is subject to change for improvement without notice.
"Products'	nt specified herein is for the purpose of introducing ROHM's products (hereinafte '). If you wish to use any such Product, please be sure to refer to the specifications be obtained from ROHM upon request.
illustrate tl	of application circuits, circuit constants and any other information contained herein ne standard usage and operations of the Products. The peripheral conditions mus nto account when designing circuits for mass production.
However,	e was taken in ensuring the accuracy of the information specified in this document should you incur any damage arising from any inaccuracy or misprint of sucl n, ROHM shall bear no responsibility for such damage.
examples implicitly, a other parti	cal information specified herein is intended only to show the typical functions of and of application circuits for the Products. ROHM does not grant you, explicitly o any license to use or exercise intellectual property or other rights held by ROHM and es. ROHM shall bear no responsibility whatsoever for any dispute arising from the h technical information.
equipment	cts specified in this document are intended to be used with general-use electronic c or devices (such as audio visual equipment, office-automation equipment, commu evices, electronic appliances and amusement devices).
The Produ	cts specified in this document are not designed to be radiation tolerant.
	HM always makes efforts to enhance the quality and reliability of its Products, a ay fail or malfunction for a variety of reasons.
against the failure of a shall bear	sure to implement in your equipment using the Products safety measures to guard e possibility of physical injury, fire or any other damage caused in the event of the ny Product, such as derating, redundancy, fire control and fail-safe designs. ROHN no responsibility whatsoever for your use of any Product outside of the prescribed ot in accordance with the instruction manual.
system wh may result instrumen fuel-contro any of the	incts are not designed or manufactured to be used with any equipment, device of hich requires an extremely high level of reliability the failure or malfunction of which in a direct threat to human life or create a risk of human injury (such as a medica t, transportation equipment, aerospace machinery, nuclear-reactor controller oller or other safety device). ROHM shall bear no responsibility in any way for use of Products for the above special purposes. If a Product is intended to be used for an ial purpose, please contact a ROHM sales representative before purchasing.
be control	nd to export or ship overseas any Product or technology specified herein that may led under the Foreign Exchange and the Foreign Trade Law, you will be required to sense or permit under the Law.



Thank you for your accessing to ROHM product informations. More detail product informations and catalogs are available, please contact us.

ROHM Customer Support System

http://www.rohm.com/contact/