


600mA High Efficiency Synchronous Buck with 350mA LDO

General Description

The LP78081 are PMU, and contain a 600mA Buck DC/DC and a 350mA Linear Regulator, Buck DC/DC is a constant frequency, current mode, PWM step-down converter. The device integrates a main switch and a synchronous rectifier for high efficiency. The 2.7V to 6.5V input voltage range makes the LP78081 is ideally suited for portable electronic devices that are powered from 1-cell Li-ion battery or from other power sources within the range such as cellular phones, PDAs and handy-terminals. Internal synchronous rectifier with low RDS(ON) dramatically reduces conduction loss at PWM mode. The internal synchronous switch increases efficiency while eliminate the need for an external Schottky diode. The switching ripple is easily smoothed-out by small package filtering elements due to a fixed operation frequency of 1.5MHz. This along with small SOT-23-6 package provide small PCB area application. Other features include soft start, lower internal reference voltage with 2% accuracy, over temperature protection, and over current protection.

Ordering Information

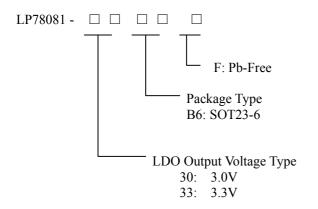

Features


- ♦ 600mA Buck High Efficiency: 96%
- ♦ 1.5MHz Fixed-Frequency PWM Operation
- ♦ Adjustable Output From 0.6V to VIN
- ♦ 350mA LDO: 3.0V and 3.3V Fixed output
- ♦ 100% Duty Cycle Low Dropout Operation
- ♦ Available in SOT23-6 Package
- ♦ Low than 1µA Shutdown Current

Applications

- ♦ Portable Media Players/MP3 players
- ♦ Cellular and Smart mobile phone
- ♦ PDA
- ♦ DSC
- ♦ Wireless Card

Pin Configurations

(TOP View)

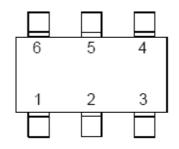

PIN NO.	1	2	3	4	5	6
Function	GND	VDD	SW	FB	EN	OUT

Marking Information

Please see website.



Typical Application Circuit


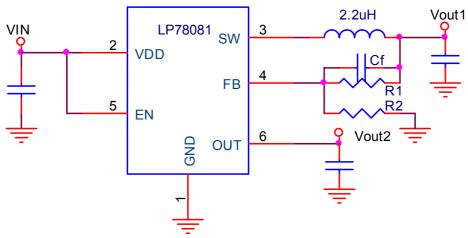


Figure 1. LP78081 High Efficiency Step-Down Converter

Functional Pin Description

Pin Number	Pin Name	Pin Function
1	GND	Ground.Chip Enable(Active High).
2	VDD	Power Input.
3	SW	Pin For Switching
4	FB	Feedback Input Pin,Reference voltage is 0.612 V
5	EN	Chip Enable.
6	OUT	LDO Output.

Function Block Diagram

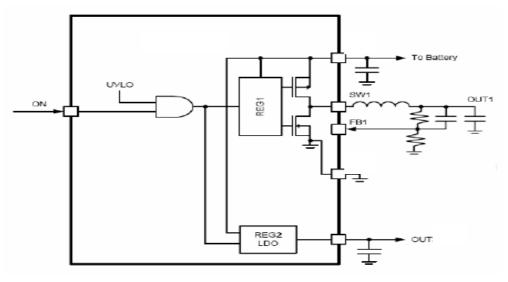

Pre	liminary	Datasheet	LP78081
Absolute Maximum Ratin	igs		
 Input Supply Voltage – 			-0.3V to 6V
LDO Current			350mA
P-Channel Switch Source 0	Current(DC)		600mA
 N-Channel Switch Current 	DC)		600mA
• Peak SW Sink and Source	Current _		800mA
Operation Temperature Ran	ige —		40℃ to 85℃
■ Junction Temperature —			125°C
■ Storage Temperature			65℃ to 150℃
 Lead Temp(Soldering, 10se 	c) ——		260°C
■ ESD Rating(HBM) —			2KV

Electrical Characteristics


(VIN = 3.6V, VOUT = 2.5V, VREF = 0.6V, L = 2.2 μ H, CIN= 4.7 μ F, COUT= 10 μ F, TA= 25°C, IMAX = 600mA unless otherwise specified)

Parameter		Symbol	Test Conditions	Min	Тур	Max	Units
Input Voltage F	Range	VIN		2.7		6.5	V
Quiescent Current		IQ	IOUT = 0mA, VFB =0.5V IOUT = 0mA, VFB =0.7V		270 25	350 35	uA
Shutdown Curr	rent	ISHDN	EN = GND		0.1	1	uA
Reference Volt	tage	VREF	For adjustable output voltage	0.602 0.625 0.632		V	
Adjustable Out	put Range	VOUT		VREF VIN - 0.2		V	
	Fixed	\triangle VOUT	VIN = 2.2 to 5.5V, VOUT = 1.2V 0A < IOUT < 600mA	-3		+3	%
		\triangle VOUT	VIN = 2.2 to 5.5V, VOUT = 1.5V 0A < IOUT < 600mA	-3		+3	%
Output Voltage		\triangle VOUT	VIN = 2.2 to 5.5V, VOUT = 1.8V 0A < IOUT < 600mA	-3		+3	%
Accuracy		\triangle VOUT	VIN = 2.8 to 5.5V, VOUT = 2.5V 0A < IOUT < 600mA	-3		+3	%
		\triangle VOUT	VIN = 3.5 to 5.5V, VOUT = 3.3V 0A < IOUT < 600mA	-3		+3	%
	Adjustable		VIN = VOUT + 0.2V to 5.5V, VIN \ge 3.5V 0A < IOUT < 600mA	-3		+3	%
		\triangle VOUT	VIN = VOUT + 0.4V to 5.5V, VIN \geq 2.2V 0A < IOUT < 600mA	-3		+3	%
LDO Output current	Ildo			300	350	400	mA
PMOSFET RON	PRDS(ON)	IOUT = 200mA	VIN = 3.6V		0.45	0.53	Ω
NMOSFET RON	NRDS(ON)	IOUT = 200mA	VIN = 3.6V		0.45		Ω
P-Channel Current Limit	IP(LM)	VIN =2.2 to 5.5V	-	600	800	1000	mA
EN Threshold	VEN			0.8	1.2	1.5	V
EN Leakage Current	VENL				2		uA



LP78081

Typical Operating Characteristics

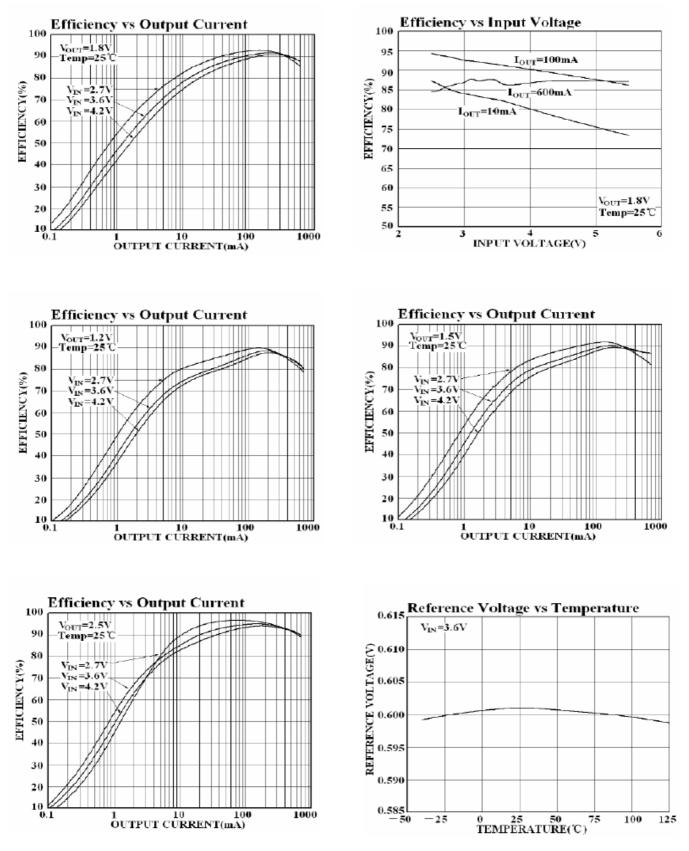



LP78081

Applications Information

The basic LP78081 applicaton circuit is shown inTypical Application Circuit. External component selection is determined by the maximum load current and begins with the selection of the inductor value and operating frequency followed by CIN and COUT.

Inductor selection

The output inductor is selected to limit the ripple

current to some predetermined value. typically 20%~40% of the full load current at the maximum input voltage. Large value inductors lower ripple currents. Higher Vin or V_{OUT} also increases the ripple current as shown in equation. A reasonable starting point for setting ripple current is $\triangle I_L$ =180mA(40% of 600mA).

$$\Delta I_{L} = \frac{1}{(f)(L)} V_{OUT} \left(1 - \frac{V_{OUT}}{V_{IN}} \right)$$

The DC current rating of the inductor should be at least equal to the maximum load current plus half the ripple current to prevent core saturation. Thus, a 720Ma rated Inductor should be enough for most applications (600mA+120mA). For better efficiency, choose a low DC-resistance inductor.

CIN and COUT Selection

The input capacitance, C_{IN} , is needed to filter the trapezoidal current at the source of the top MOSFET. To prevent large ripple voltage, a low ESR input capacitor Sized for the maximum RMS current should be used. RMS current is given by:

$$I_{RMS} = I_{OUT(MAX)} \frac{V_{OUT}}{V_{IN}} \sqrt{\frac{V_{IN}}{V_{OUT}} - 1}$$

This formula has a maximum at $V_{IN}=2V_{OUT}$, where $I_{RMS}=I_{OUT}/2$.this simple worst-case condition is commonly.Used for design because even significant deviations do not offer much relief. Note that ripple current ratings from capacitor manufacturers are often based on only 2000 hours of life which makes it advisable to further derate the Capacitor, or choose a capacitor rated at a higher temperature Than required. Several capacitors may also be paralleled to meet size or height requirements in the design.

The selection of COUT is determined by the effective

series resistance(ESR) that is required to minimize voltage ripple and load step transients, an well as the amount or bulk capacitance that is necessary to ensure that the control loop is stable. Loop stability can be checked by viesing the load transient response as described in later section.the output ripple, $\triangle V_{OUT}$, is determined by:

$$\Delta V_{\text{OUT}} \leq \Delta I_{\text{L}} \left[\text{ESR} + \frac{1}{8 f C_{\text{OUT}}} \right]$$

Using ceramic input and output capacitors

Higher values, lower cost ceramic capacitors are now becoming .Available in smaller case sizes ,their high ripple current ,high voltage rating and low ESR make them ideal for switching regulator applications. however care must be taken when these capacitors are used at the input and output. When a ceramic capacitor is use at input and the power is supplied by a wall adapter through long wires, a load step at the output can induce ringing at the input ,V_{IN}, At worst,a sudden inrush of current through the long wires can potentially cause a voltage spike at V_{IN} large enough to damage the part.


Output voltage programming

The output voltage is set by a resistive divider according to the

Following formula:

$$V_{OUT} = 0.6V \left(1 + \frac{R2}{R1}\right)$$

The external resistive divider is connected to the output, allowing Remote voltage sensing as shown in figure3.

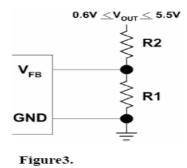



LP78081

Efficiency considerations

The efficiency of a switching regulator is equal to the output Power divided by the input power times 100%.it is often useful to analyze individual losses to determine what is limiting the efficiency and which change would produce the most improvement efficiency can be expressed as :

Efficiency= 100%- (L1+L2+L3...)

Where L1 $\$ L2, etc. are the individual losses as a percentage of Input power .although all dissipative elements in the for most of losses: VIN quiescent current and 1^2 R loss dominates the efficiency loss at medium to high load currents. In a typical efficiency plot, the efficiency curve at very low load currents can be misleading since the actual power lost is of no consequence.

1. The VIN quiescent current is due to two components: the DC Bias current as given in the electrical characteristics and the Internal main switch and synchronous switch gate charge currents. the gate charge current results from switching the gate capacitance of the internal power MOSFET switches .Each time the gate charge current.results from switching the gate capacitance of the internal power MOSFET switches. Each time the gate is switches from high to low to high again, a packet of charge $\triangle Q$ moves from V_{IN} to ground.

The resulting $\triangle Q/\triangle t$ is the current out of V_{IN} that is typically larger than the DC bias current. In continuous mode.

$$L_{GATCHG} = f(Q_T + Q_B)$$

Where Q_T and Q_B are the gate charges of the internal top and bottom switches. Both the DC bias and gate charge losses are proportional to V_{IN} and thus their effects will be more pronounced at higher supply voltages.

2. 1^2 Rlosses tae calculated from the resistances of the internal switches, R_{SW} and external inductor R_L . in continuous mode the average output current flowing through inductor L is "chopped" between the main switch and the synchronous switch. Thus, the series resistance looking into the LX pin is a function of both top and bottom MOSFER $R_{DS(ON)}$ and the duty cycle (DC) as follows:

 $R_{SW} = R_{DS(ON)TOP} \times DC + R_{DS(ON)BOT} \times (1-DC)$

The $R_{DS(ON)}$ for both the top and bottom MOSFETS can be obtained from the typical performance characteristics curves. thus, to obtain 1^2R losses, simply add R_{SW} to R_L and multiply the square of the average output current.

Other losses including C_{IN} and C_{OUT} ESR dissipative losses and inductor core losses generally account for less than 2% of the total loss.



Preliminary Datasheet

Checking Transient Response


The regulator loop response can be checked by looking at the load transient response. Switching regulators take several cycles to respond to a step in load current. When a load step occurs, VOUT immediately shifts by an amount equal to Δ ILOAD (ESR), where ESR is the effective series resistance of COUT. Δ ILOAD also begins to charge or discharge COUT generating a feedback error signal used by the regulator to return VOUT to its steady-state value. During this recovery time, VOUT can be monitored for overshoot or ringing that would indicate a stability problem.

Layout Considerations

- ♦ Follow the PCB layout guidelines for optimal performance of LP78081.
- ♦ For the main current paths as indicated in bold lines, keep their traces short and wide.
- ♦ Put the input capacitor as close as possible to the device pins (VIN and GND).
- ♦ LX node is with high frequency voltage swing and should be kept small area. Keep analog components away from LX node to prevent stray capacitive noise pick-up.
- ♦ Connect feedback network behind the output capacitors. Keep the loop area small. Place the feedback components near the LP78081.
- Connect all analog grounds to a command node and then connect the command node to the power ground behind the output capacitors.



Packaging Information

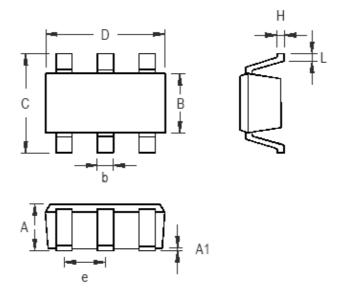

Symbol	Dimensions	n Millimeters	Dimensions In Inches		
	Min	Max	Min	Max	
А	0.889	1.295	0.031	0.051	
A1	0.000	0.152	0.000	0.006	
В	1.397	1.803	0.055	0.071	
b	0.250	0.560	0.010	0.022	
С	2.591	2.997	0.102	0.118	
D	2.692	3.099	0.106	0.122	
е	0.838	1.041	0.033	0.041	
Н	0.080	0.254	0.003	0.010	
L	0.300	0.610	0.012	0.024	

SOT- 26 Surface Mount Package