

KNOBS

TYPE

PATTERN

A **B** **C** **D** **E** **F**


THREAD OR BORE

TO FIT SHAFT
DIAMETER

700-2014



RENKOL

Gloss finish duroplast

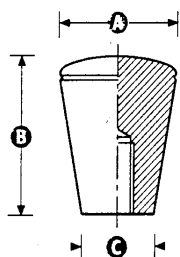


FEMALE	1031	22	30	12	M6 M8
Moulded thread	1032	28	35	18	M8 M10
	1033	35	44	22	M10 M12
	1034	45	60	25	M10 M12
SELF FIX	1031/SF	22	30	12	6
Simple knock-on assembly onto plain shaft	1032/SF	28	35	18	8
	1033/SF	35	44	22	10 12
	1034/SF	45	60	25	12 16

Gloss finish duroplast

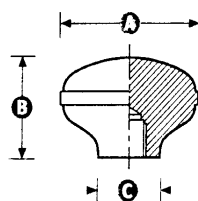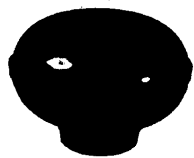


FEMALE	360	38	24	17	M6 M8 M10
Moulded thread	361	51	34	22	M10 M12
SELF FIX	360/SF	38	24	17	10
Simple knock-on assembly onto plain shaft	361/SF	51	34	22	12

Gloss finish duroplast

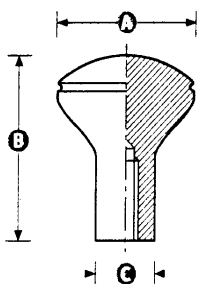

FEMALE	940	30	35	16	M6 M8 M10
Moulded thread					

Gloss finish duroplast

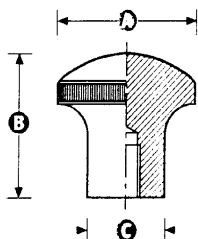

FEMALE	942	38	38	22	M6 M8 M10
Moulded thread					

TYPE

PATTERN

A **B** **C** **D** **E** **F**

THREAD OR BORE

TO FIT SHAFT
DIAMETER