

SELF ASSEMBLY THUMB SCREW KNOBS



PATTERN



TO FIT SOCKET HEAD
CAP SCREW

Knurled knob - self assembly



Thermoplastic, available in black, red and grey

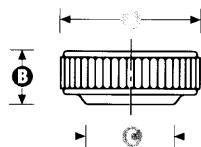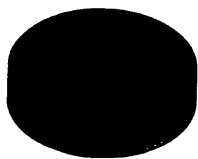

SSK1	10	4	8	M3
SSK2	13	5	10	M4
SSK3	16	6	11	M5
SSK4	19	8	13	M6
SSK5	26	8	13	M6
SSK6	26	10	16	M8

Rosette knob - self assembly


Thermoplastic, available in black and grey

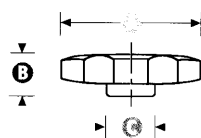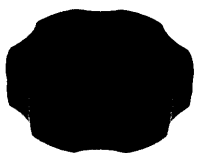

SSR1	38	10	13	M6
SSR2	38	10	16	M8
SSR3	38	12	20	M10

Tee Knob - self assembly

Thermoplastic, available in black, red and grey

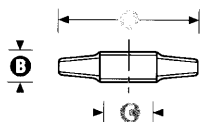


SST1	26	7	12	M5
SST2	30	8	14	M6
SST3	38	10	17	M8
SST4	45	12	20	M10


PATTERN




TO FIT SOCKET HEAD
CAP SCREW

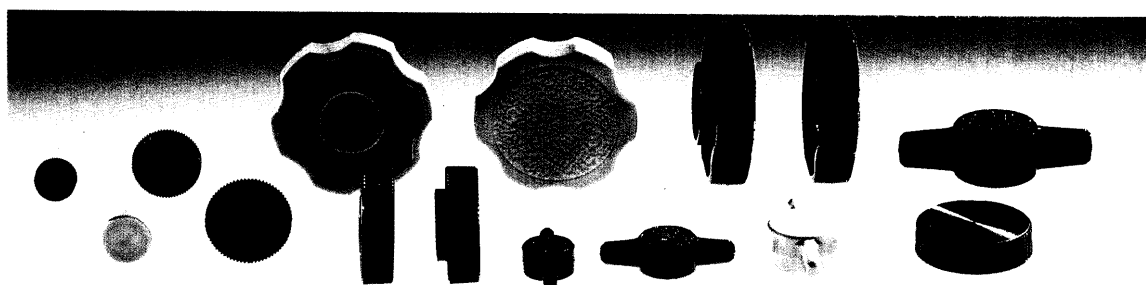


How to assemble your own thumb
screw knobs

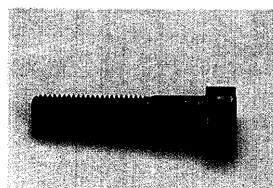


1 Select the required socket head
cap screw - from M3 to M10

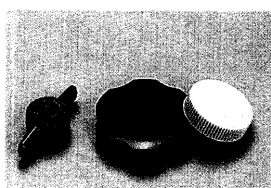

2 Select the knob type and size
to suit your application

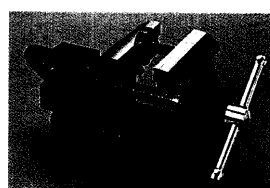

3 Select a simple assembly
method - no special tools or glue
necessary

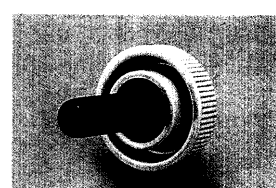

4 Your instant thumb screw is
ready for use

All dimensions in mm
and are approximate