

STV 2160



PAGE 1

[illegible]

0 = TV et AV1
AV2 = 3.5

3.6 MUTE
0 TV

Part of board connected to mains supply.
Partie du châssis reliée au secteur.
Primärseite des Netzteils.
Parte del chasis conectar a la red.
Parte dello chassis collegata alla rete.



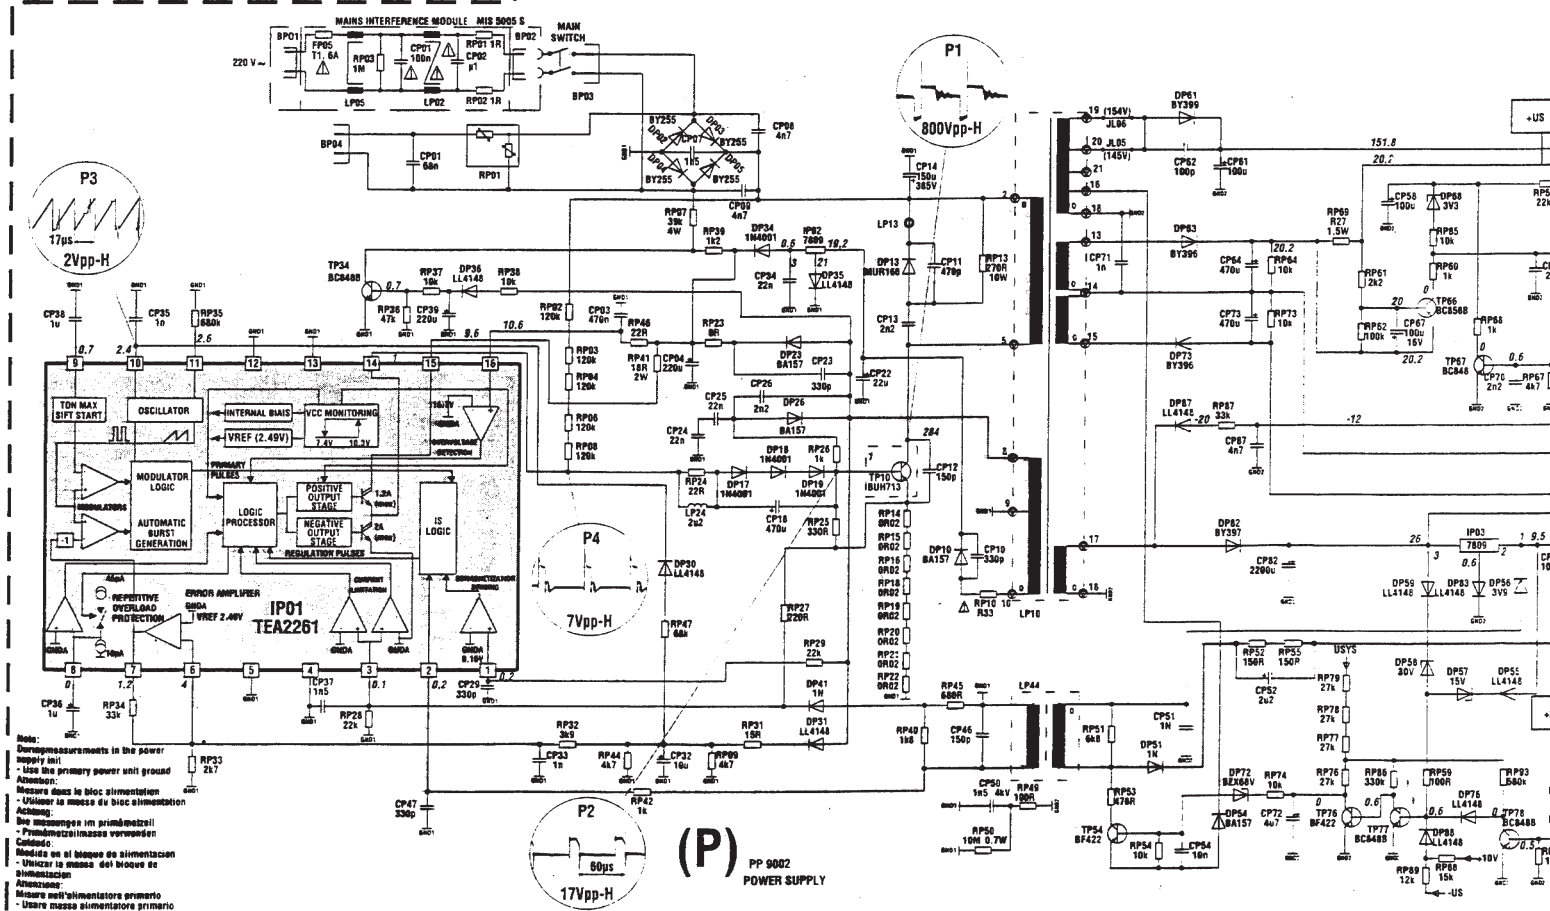
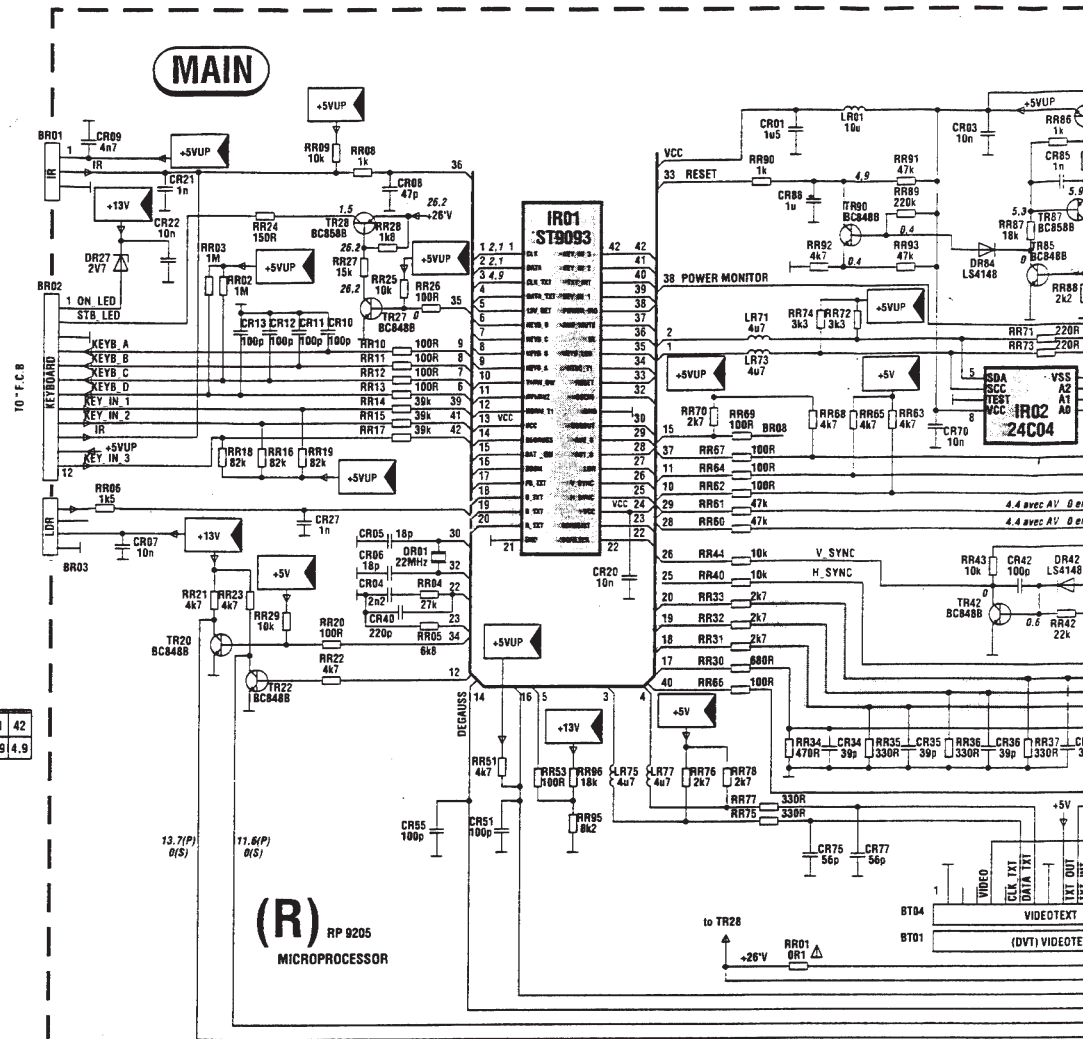


2

CVBS : Name of signal
(H) : Origin or destination

CP 9101
CHROMA PROCESSING

HP	IF	RH04	RH05	RH07	RH09	RH15	CH14
0021	2230	340R	1K18	330R	120R	357R	330p
0023	2343	196R	1K18	330R	300R	680R	100p

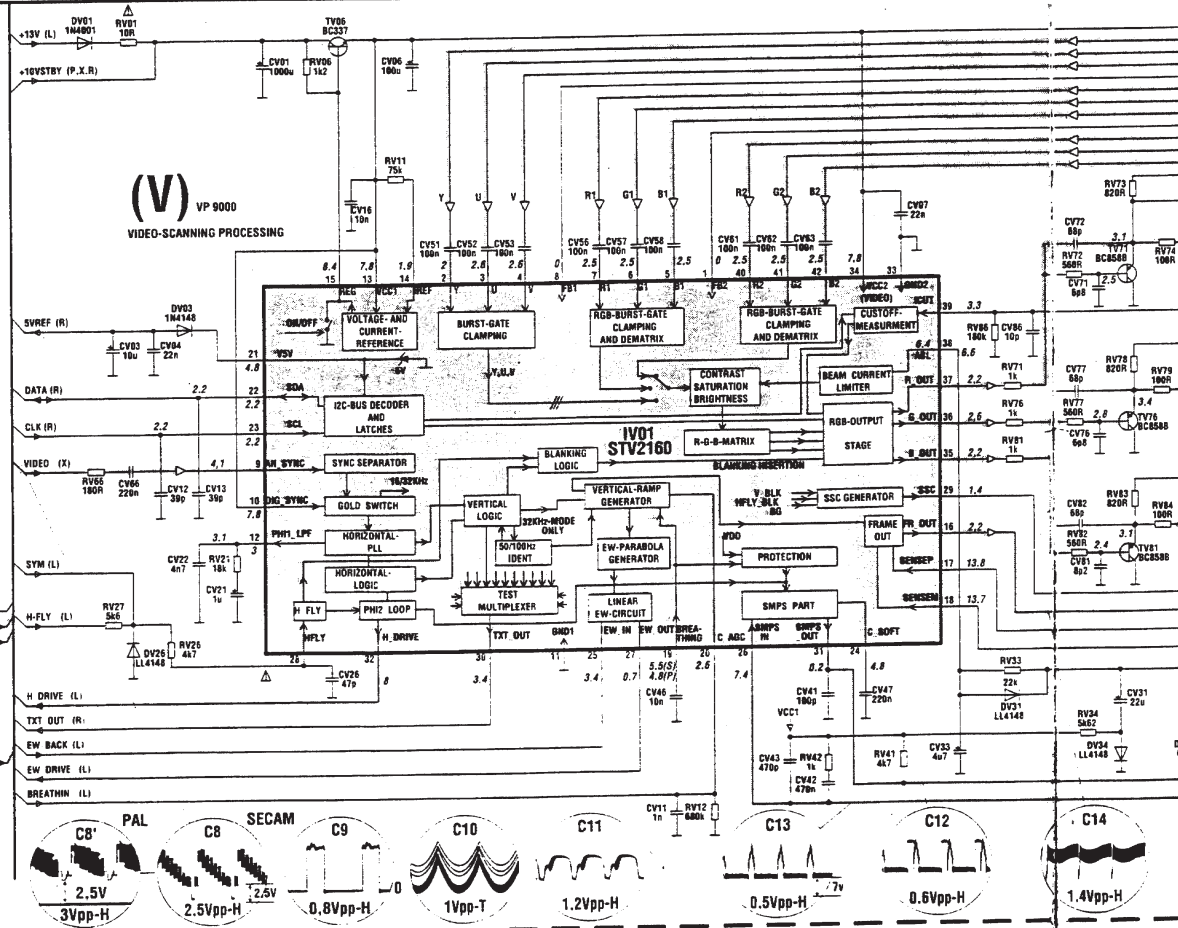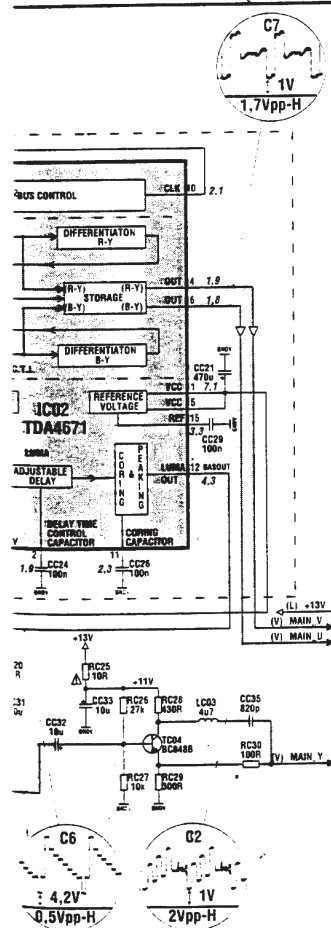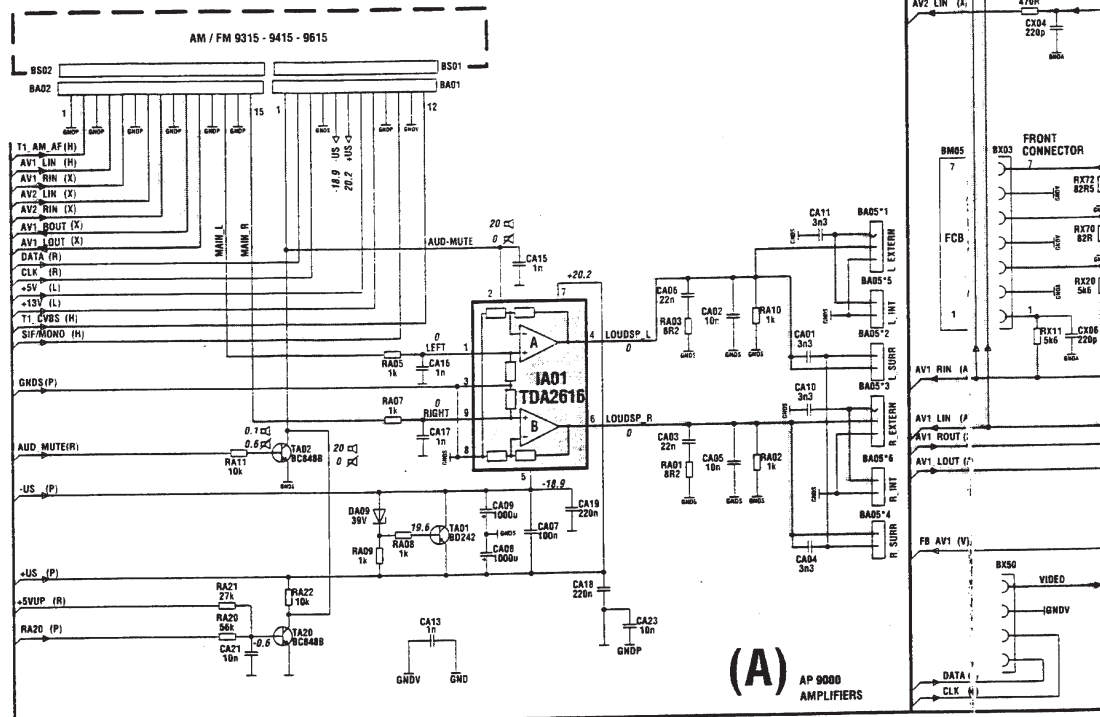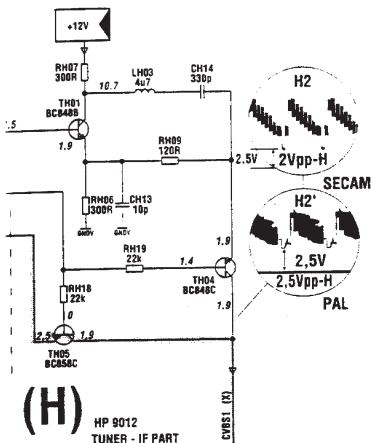





	IX01	1	2	3	4	5	6	7	8	9	10
V	AV1	0	2	2	0	0	0	0	0	13.7	0
	AV2	2.4	0	2.4	-	0	0	0	0	0	0
	TV	0	0	2.4	2.4	0	0	0	0	13.7	11.5
	IX01	11	12	13	14	15	16				
	AV1	0	0	2.1	0	2.1	13.6				
	AV2	0	2.4	2.4	0	0	13.6				
	TV	0	0	0	0	0	13.6				

Partlist		RF29
LP8420	45	133R
LP9430	54	120R
LP9440	54	100R
LP9450	54	120R
LP9460	54	68R
LP9470	54	68R
LP9480	45	82R
LP9490	54	47R
LP9620	45	133R
LP9630	54	120R
LP9640	54	100R
LP9650	54	120R
LP9680	54	82R
LP9690	54	47R

