



6.5A, 600kHz Synchronous **Step-up Converter with Output Disconnect Evaluation Board**

DESCRIPTION

EV3422-G-00A Evaluation Board is designed to demonstrate the capability of MP3422. MP3422 is a high-efficiency, synchronous, current-mode, step-up converter with output disconnect.

The MP3422 can provide inrush current limiting and output short-circuit protection. It can work with an input voltage as low as 2.5V. The integrated P-channel synchronous rectifier improves efficiency and eliminates the need for an external Schottky diode. The PMOS disconnects the output from the input when the part shuts down.

The 600kHz switching frequency allows for small external components, while the internal compensation and soft-start minimize the external component count. The MP3422 is available in 14-pin QFN 2mmx2mm package.

ELECTRICAL SPECIFICATION

| Parameter | Symbol | Value | Units |
|----------------|------------------|-----------|-------|
| Input Voltage | V_{IN} | 2.8 – 4.2 | V |
| Output Voltage | V_{OUT} | 5 | V |
| Output Current | I _{OUT} | 0 – 2.5 | Α |

FEATURES

- 2.5V to 5.5V Input Work Range
- 2.5V to 5.5V Output Range
- Internal Synchronous Rectifier
- 600kHz Fixed Frequency Switching
- >6.5A Switch Current Limit Capability
- 43uA Quiescent Current
- High Efficiency over Full Load Range
- Internal Soft-start and Compensation
- True Output Load Disconnect from Input
- OCP, SCP, OVP and OTP Protection
- Small QFN2x2-14 Package

APPLICATIONS

- **Battery-Powered Products**
- Personal Medical Devices
- Portable Media Plavers
- Wireless Peripherals
- Handheld Computers and Smart Phones


All MPS parts are lead-free and adhere to the RoHS directive. For MPS green status, please visit MPS website under Products, Quality Assurance page. "MPS" and "The Future of Analog IC Technology", are Registered Trademarks of Monolithic Power Systems, Inc.

EV3422-G-00A EVALUATION BOARD



(L x W x H) 6.35cm x 6.35cm x 0.6cm


| Board Number | MPS IC Number | | |
|--------------|---------------|--|--|
| EV3422-G-00A | MP3422GG | | |

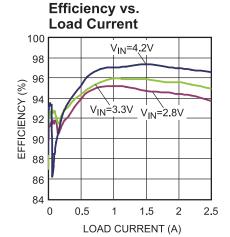

© 2014 MPS. All Rights Reserved.



EVALUATION BOARD SCHEMATIC

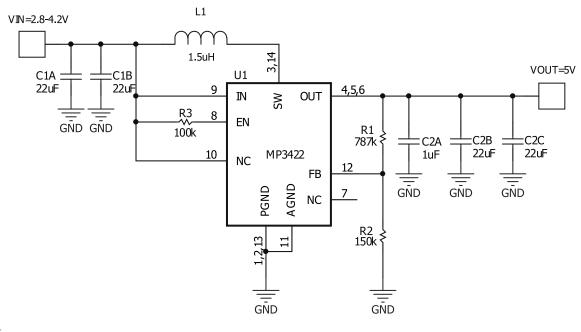

Notes:

- 1) NC (PIN10) need short to VIN.
- 2) NC (PIN7) need float or connect to GND
- 3) It is strongly recommended control IC on/off through EN pin.


EV3422-G-00A BILL OF MATERIALS

| Qty | Ref | Value | Description | Package | Manufacturer | Part Number |
|-----|-----------------------|--------|--|-------------------|--------------|--------------------|
| 4 | C1A, C1B, C2B, C2C | 22µF | Ceramic Cap, 10V,X7R | 1210 | Murata | GRM32ER71A226KE20L |
| 1 | C2A | 1µF | Ceramic Cap,10V,X5R | 0603 | Murata | GRM188R61A105KA61D |
| 1 | L1 | 1.5µH | RDC=6.6mΩ, IR=11A,Isat=14A, | SMD | Wurth | 744311150 |
| 1 | R1 | 787kΩ | Film Res,1% | 0603 | YAGEO | RC0603FR-07787KL |
| 1 | R2 | 150kΩ | Film Res,1% | 0603 | ROYAL | RL0603FR-07150KL |
| 1 | R3 | 100kΩ | Film Res,1% | 0603 | ROYAL | RL0603FR-07100KL |
| 1 | U1 | MP3422 | 6.5A Synchronous Step- up Converter with Output Disconnect | QFN-14 2mmx2mm | MPS | MP3422GG |



EVB TEST RESULTS


Performance waveforms are tested on the evaluation board. $V_{IN}=3.3V,\,V_{OUT}=5V,\,L=1.5\mu H,\,T_A=25^{\circ}C,\,unless$ otherwise noted.

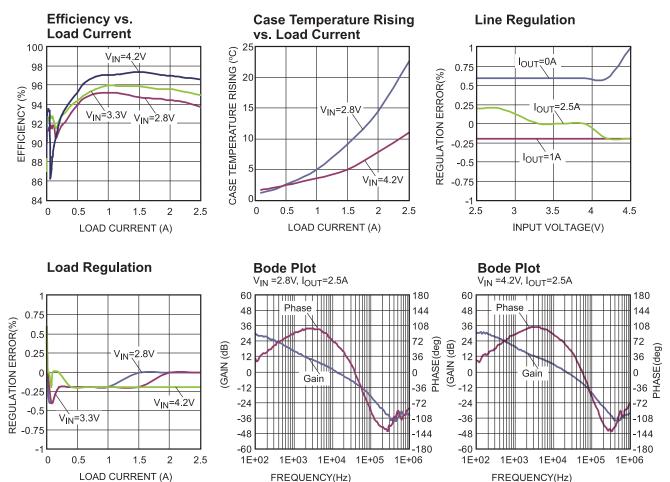



EVB TEST RESULTS (continued)

Performance waveforms are tested on the evaluation board. $V_{IN}=3.3V,\,V_{OUT}=5V,\,L=1.5\mu H,\,T_A=25^{o}C,\,unless$ otherwise noted.

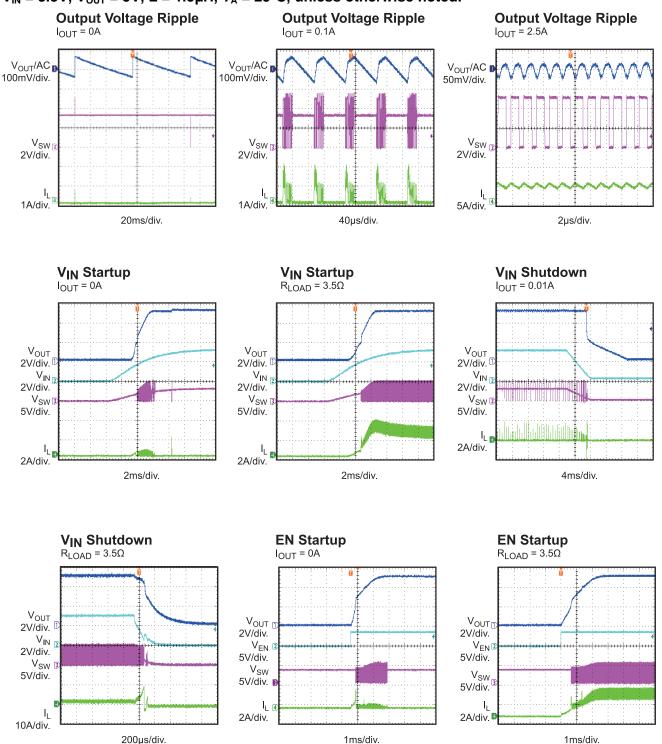

I_{LOAD}

1ms/div.

2A/div.




EVB TEST RESULTS (continued)

Performance waveforms are tested on the evaluation board. $V_{IN}=3.3V,\,V_{OUT}=5V,\,L=1.5\mu H,\,T_A=25^{\circ}C,\,unless$ otherwise noted.

 I_{LOAD}

5A/div.

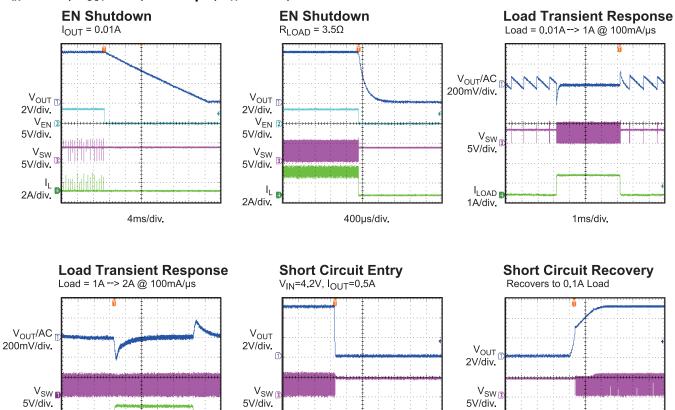

200µs/div.


 I_{LOAD}

100µs/div.

1A/div.



PRINTED CIRCUIT BOARD LAYOUT

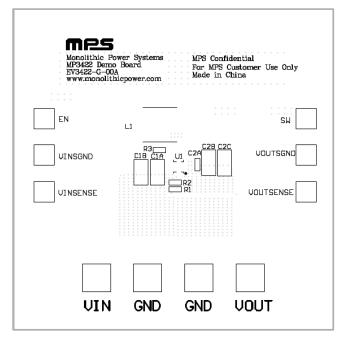

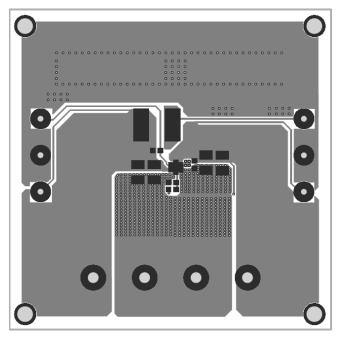


Figure 1—Top Silk Layer

Figure 2—Top Layer

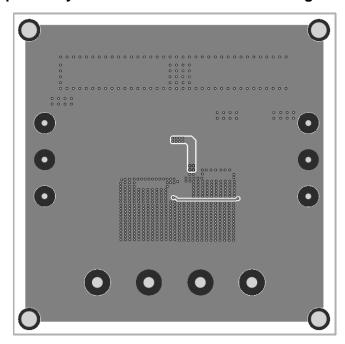


Figure 3—Bottom Layer



QUICK START GUIDE

The output voltage of this board is set to 5V. The board layout accommodates most commonly used components.

- 1. Preset Power Supply to $2.8V \le V_{IN} \le 4.2V$.
- 2. Turn Power Supply off.
- 3. Connect Power Supply terminals to:
 - a. Positive (+): VIN
 - b. Negative (-): GND
- 4. Connect Load to:
 - a. Positive (+): VOUT
 - b. Negative (-): GND
- 5. Turn Power Supply on after making connections.
- 6. The MP3422 is enabled on the evaluation board once VIN is applied.
- 7. The output voltage VOUT can be changed by varying R2. Calculate the new value using the formula:

$$V_{out} = V_{FB} \times \frac{R1 + R2}{R2}$$

Where $V_{FB} = 0.807V$ and R1=787k Ω .

8. To use the Enable function, apply a digital input to the EN pin. Drive EN higher than 1.2V to turn on MP3422 or less than 0.4V to turn it off.

NOTICE: The information in this document is subject to change without notice. Please contact MPS for current specifications. Users should warrant and guarantee that third party Intellectual Property rights are not infringed upon when integrating MPS products into any application. MPS will not assume any legal responsibility for any said applications.