
# Agilent 34832A BenchLink Data Logger Pro Software for Agilent 34980A

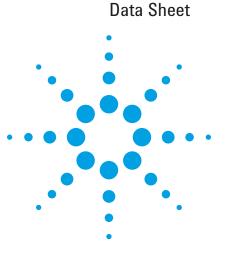


Advanced data logging and decision making with no programming

## **Key features**

- Quick test setup and execution
- Create multiple scan lists
- Execute different events based on predefined limits
- Use advanced math functions
- Collect, monitor and manage data
- Present data on a single or multiple graphs
- Export data to other applications for presentation and analysis

The Agilent BenchLink Data Logger Pro software provides a convenient way to collect and analyze your data. This software is a Windows<sup>®</sup>-based application that uses a familiar spreadsheet environment to define measurement data to be collected. The tab-based format makes it easy to set up multiple scanlists and initiate scans based on predefined limits. Simply identify the measurements you want to acquire, define limits and actions to be performed, and then initiate the process. Your data is then collected, acted on real-time and displayed in table and graphical formats.

With the BenchLink Data Logger Pro software you get advanced data logging and decision making capabilities without spending hours programming.

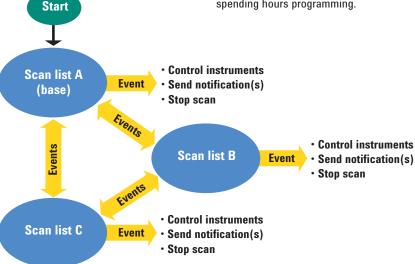



## **BenchLink Data Logger**

Your 34980A Mulifunction Switch/Measure Unit comes standard with the BenchLink Data Logger software. This software gives you all the basic data logger capabilities including:

- Easy connection to the PC
- · Set up measurements and scan lists
- · Computed channels and alarms
- Collection, graphing and export of your data

The BenchLink software supports advanced features of the 34980A. You can log data at high speeds with the 34925A FET multiplexer at 900 ch/sec.

The BenchLlnk Data Logger Pro software adds advanced data logging and decision making with no programming required. See Table 1 for a list of standard features in both products.

## **Multiple scan lists**

With BenchLink Data Logger Pro you can identify multiple scan lists to be executed based on different limits specified in your configuration.

## Setting limits and events

Set limits to identity when to start other tasks. For out of limit conditions, you can specify for different events to be completed.

Scripts can be used to close switches or send DIO within the data acquisition unit, or SCPI commands can be sent to other instruments connected to the PC. For example, when an oven reaches the desired temperature limit, you can start a script to send a SCPI command to the power supply to change the input power to your device under test and switch to a faster scan rate to collect the desired measurements.

For out of limit conditions other notifications such as audio beep, log events or run an external program can also be preformed. See Figure 1.

#### Table 1. Comparing BenchLink Data Logger and BenchLink Data Logger Pro

Feature	BenchLink Data Logger	BenchLink Data Logger Pro
Easy set up and configuration	٠	•
Identify measurement for each channel	•	•
Set up and execute scans	•	•
Set up alarms conditions	•	•
Math functions including mx+b	•	•
View real-time and historical data	•	•
Support of multiple graphs	•	•
Log data to disk	٠	•
Save and export data	•	•
Limit checking and decision making		•
Support of multiple scan lists		•
Customizable scripts		•
Run external programs based on alarms and events		•
Conditional control other instruments via SCPI		•
State diagram documentation		•
Advanced math and formula support		•
Data reduction rules		•
Simulation mode		•

#### Figure 1. Configuring events for out of limit conditions

Configura	ation Data Tools I	Help						
	Configuration:	Ins	truments:	Scan Mode:			Message Log:	
S	itatus: Getting Starte	ed with M 🔒 1 (	Connected	Simulation Mode			Information(0) View	
Confi	gure Instruments	Configure Scar	Lists Configu	re Events Scan and L	og Data Quick Graph			
State D	iagram		_,					
	Show State	Diagram						
			_					
	ts when Running O							
	ts when Running O Name	Event	Select Limit	(s) that Triggers Event	Run Action Script	Notification(s)	Next Step	
	-		Select Limit Not Applica		Run Action Script Close Fixture, Oven On	Notification(s) None	Next Step Continue Scan	
	-	Event	Not Applica		Close Fixture, Oven On			
	-	Event At Start of Scan	Not Applica	sble ≺Oven Temp>)Range 2.4e01 T	Close Fixture, Oven On	None	Continue Scan	
	-	Event At Start of Scan On Single Channel Lin	Not Applica nit Instr1(1001	sble <oven temp="">)Range 2.4e01 T sble</oven>	Close Fixture, Oven On o 2.6el Program Power Supply	None None	Continue Scan Stop Scan and Start Scan on Test DUT	
Priority 1 2 3	-	Event At Start of Scan On Single Channel Lin At End of Scan Add Event	nit Not Applica Instr1(1001 Not Applica	sble <oven temp="">)Range 2.4e01 T sble</oven>	Close Fixture, Oven On o 2.6el Program Power Supply None	None None None	Continue Scan Stop Scan and Start Scan on Test DUT	
Priority 1 2 3 <b>Even</b>	Name	Event At Start of Scan On Single Channel Lin At End of Scan Add Event	Not Applica nit Instr1(1001 Not Applica Delete	sble <oven temp="">)Range 2.4e01 T sble</oven>	Close Fixture, Oven On o 2.6el Program Power Supply None	None None None	Continue Scan Stop Scan and Start Scan on Test DUT	
Priority 1 2 3 <b>Even</b>	Name ts when Running Te	Event At Start of Scan On Single Channel Lin At End of Scan Add Event est DUT	Not Applica nit Instr1(1001 Not Applica Delete	ble <0ven Temp>) Range 2.4e01 T ble Event (s) that Triggers Event	Close Fixture, Oven On to 2.6el Program Power Supply None Move Up	None None None Move Down	Continue Scan Stop Scan and Start Scan on Test DUT Stop Configuration	
Priority 1 2 3 • • • • • •	Name ts when Running Te	Event At Start of Scan On Single Channel Lin At End of Scan Add Event est DUT Event	Not Applica nit Instr1(1001 Not Applica Delete	ble <oven temp="">) Range 2.4e01 T ble Event (s) that Triggers Event ble</oven>	Close Fixture, Oven On o 2.6el Program Power Supply None Move Up	None None More Down Notification(s) None	Continue Scan Stop Scan and Start Scan on Test DUT Stop Configuration	

The state diagram feature graphically shows the limits and the order of execution for scan lists, events, scripts and other notifications. See Figure 2.

## **Computed channels**

Statistical calculations can be added to analyze unique data points. Create computed channels for mathematical relationships with +, -. \*, /, dB, dBm, dBV, x2, SRT, full, ½ or 1/4 bridge strain. BenchLink Data Logger Pro adds a calculator function for additional math functions such as Sin, Cos, Tan and Log. Formulas can also be used for more complex equations including polynomial equations.

## Graphing and exporting data

Graph your data, save it to disk, or export it to other applications for further analysis.

Use the quick graph tab to monitor your data real time. You can specify multiple channels per graph, or send collected data to multiple graphs


Use strip charts with markers and alarm indication, or histograms with statistics. The data can be displayed with the auto scale or center on a common a reference point.

The data reduction features allow you to filter the data begin graphed or exported so that you only view or collect the data of interest. The raw data is saved in Comma separated variable format (.CSV) and can be easily imported into standard Microsoft<sup>®</sup> applications such as Microsoft Word and Excel<sup>®</sup> for further analysis and documentation. Whether monitoring incoming data or reviewing historical data, you can use one of the many analog or digital options to display your data.

Data management is vital for data logging applications. The BenchLink software

#### Figure 2. Oven control state diagram

Print State Diagram Export to JPEG Refresh Close Help Start scan 1. At start of scan (A1) Oven warm-up 2. On single 3. At end of scan (A3) channel limit (A2->B2->C2) TestDUT 2. At end of scan (A2->B2->C2) Done scanning

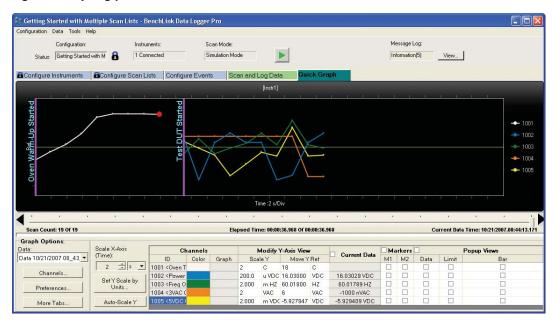

### Figure 3. Graphing your data

features a data manager that allows you to easily manage all configurations and dataset files. Use this feature to copy instrument settings, find related data logs, rename files, edit comments, export data logs to .CVS format or just delete unwanted data.

The Windows user interface is also localized into multiple languages and includes context sensitive help

## Specifications

#### System requirements

Operating system:

Windows Vista, XP SP2, 2000 SP4 (does not support any home editions)

- Controller: Recommend Pentium® 4, 800 MHz or greater, min. Pentium III, 500 MHz
- RAM: Recommend 256 MB or greater, min. 128 MB

Disk space: Recommend 200 MB, min. 100 MB

Display: 1024 x 768 resolution, 256 colors Adobe® Acrobat® Reader V5.0 or higher (to view documentation)

#### Included run-time software components

- Microsoft .NET V2.0
- Microsoft Data access components V2 8 SP1
- Microsoft Internet Explorer V6.0
- Agilent IO Libraries Version 14.1 or later (included on a separate CD)

#### Supported instruments

34980A Multifunction switch/measure unit with DMM and any of the following modules:

- 34921A/22A/23A/24A/25A Multiplexers
- 34931A/32A/33A Matrix switches
- 34937A/38A GP Switches
- 34941A/42A/46A/47A High frequency switches
- 34952A Multifunction module
- · Supports one instrument at full speed or 2 instruments at a reduced speed

If you have a 34830A license as well, then you can configure up to two 34970As and one 34980A into a single configuration.

#### **Supported interfaces**

· IEEE-488 GPIB, LAN, USB (at 9600 baud rate)

#### Performance

Scanning speeds with 34980A\*: 343921A/22A 100 ch/sec 34923A/24A 500 ch/sec 34925A 900 ch/sec 34952A DIO read/write speed 95 ch/sec

Speeds are for 41/2 digits, delay 0, display off, autozero off. Scanning is within bank on the same module. Add 10 ms for between banks or modules. See the 34980A data sheet for additional 34980A performance specs

#### Localization

GUI fully localized with context-sensitive help in English, Simplified Chinese, Japanese, Korean, French, and German.

#### Ordering and licensing information

The BenchLink Data Logger software ships for free with every 34980A that has the internal DMM. The BenchLink Data Logger Pro software can be found on the same CD-ROM and can be used for 30 days with no obligation. After 30 days a software license is required to continue to use this software. Each PC requires a separate license. Go to www.agilent.com/ find/34832A for purchasing information.

#### **Related literature**

Agilent 34980A Multifunction Switch/ Measure Unit, Data Sheet 5989-1437EN

### www.agilent.com

For more information on Agilent Technologies' products, applications or services, please contact your local Agilent office. The complete list is available at:

#### www.agilent.com/find/contactus

Americas	
Canada	(877) 894-4414
Latin America	305 269 7500
United States	(800) 829-4444

#### Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Thailand	1 800 226 008

#### **Europe & Middle East**

01 36027 71571
32 (0) 2 404 93 40
45 70 13 15 15
358 (0) 10 855 2100
0825 010 700*
*0.125 €/minute
07031 464 6333
1890 924 204
972-3-9288-504/544
39 02 92 60 8484
31 (0) 20 547 2111
34 (91) 631 3300
0200-88 22 55
0800 80 53 53
44 (0) 118 9276201

Other European Countries: www.agilent.com/find/contactus Revised: March 24, 2009

© Agilent Technologies, Inc. 2007 Printed in USA, June 16, 2009 5989-7621EN



www.agilent.com/find/emailupdates Get the latest information on the products and applications you select.

# Agilent Direct

#### www.agilent.com/find/agilentdirect Quickly choose and use your test

equipment solutions with confidence. For more information on repair and

calibration services, go to

www.agilent.com/find/removealldoubt

Microsoft, Windows, and Windows NT are U.S. registered trademarks of Microsoft Corporation.

Adobe and Acrobat are trademarks of Adobe Systems Incorporated.

Pentium is a U.S. registered trademark of Intel Corporation.

Product specifications and descriptions in this document subject to change without notice.

