

Product Specification



Description

The BT-210 Bluetooth USB Adapter is a perfect solution for those looking for easy, all-in-one, Bluetooth connectivity.

Our design eliminates the need for a system to apply its processing and memory resources to running the BT-210 since it already has its own microprocessor, memory, and firmware!

Customized firmware for peripheral device interaction, power optimization, security, and other proprietary features may be supported and can be ordered pre-loaded and configured.

Additional Documentation

- abSerial User Guide
- abSerial Reference Guide
- BT-21 Datasheet

🛞 Bluetooth

Features

- Bluetooth Radio
- Fully embedded Bluetooth v2.0 Serial Profile
- Class 2 radio
- Built with our BT-21 bluetooth module
- Wireless data communications
- Integrated chip antenna
- 128-bit encryption security
- Range up to 30m LOS
- FCC & Bluetooth qualified
- ST Micro ARM7 microprocessor up to 50MHz
- Memory
- 256K bytes flash memory
- 64K bytes RAM memory
- Data Rate
- 2M bps maximum data rate
- Multipoint capability
- Serial Interface
- COM port, up to 480K baud
- USB v2.0
- User Interface
- AT command set (abSerial)



Software Architecture

Lower Layer Stack


- Full Bluetooth v2.0 data rate (3M bps maximum)
- Device power modes—active, sleep and deep sleep
- Wake on Bluetooth feature—optimized power consumption of host CPU
- Authentication and encryption
- Encryption key length from 8-bits to 128-bits maximum
- Persistent FLASH memory—for BD Address and radio parameter storage
- All ACL (Asynchronous Connection Less) packet types (DM1, DH1, DM3, DH3, DM5, DH5, 2-DH1, 2-DH3, 2-DH5, 3-DH1 3-DH3, 3-DH5, AUX1)
- SCO (Synchronous Connection Oriented) packet types (HV1, HV2, HV3)
- Point to multipoint and scatternet support—3 master and 7 slave links allowed (10 active links simultaneously)
- Park, sniff, and hold modes—fully supported to maximum allowed intervals
- Master slave switch—supported during connection and post connection
- Dedicated Inquiry Access Code—for improved inquiry scan performance
- Dynamic packet selection—channel quality driven data rate to optimize link performance
- Dynamic power control—interference reduction and link performance
- Bluetooth test modes—per Bluetooth v2.0 specification
- 802.11b co-existence—AWMA and AFH
- Vendor specific HCI commands—to support device configuration and certification test modes

Upper Layer Stack

- SPP, OBEX, SDAP, GAP, and DUN protocols
- RFComm, SDP, and L2CAP supported

HCI Interface

- Bluetooth v2.0 specification compliant
- HCI UART transport layer (H4)
- Firmware upgrade over UART

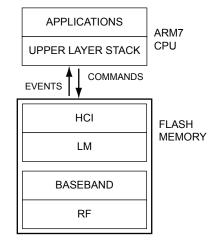

HCI STACK



Amp'ed RF, Inc. (phone) 408 213-9530 (fax) 408 213-9533

Driver Installation

Windows XP Installation Instructions:

Step 1

Simply plug in the BT-210 into any available USB port. The computer will respond with the following two messages...





Step 2

Next, Windows will launch a "Found New Hardware Wizard" installation window.

Select YES to locate the drivers from the Microsoft website.




Amp'ed RF, Inc.

(phone) 408 213-9530 (fax) 408 213-9533

Found New Hardware Wizard	
	Welcome to the Found New Hardware Wizard Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission). Read our privacy policy
	Can Windows connect to Windows Update to search for software? • <u>Yes</u> , this time only • Yes, now and <u>every</u> time I connect a device • No, not this <u>time</u> Click Next to continue.
	< Back Next > Cancel

Click **NEXT** to install automatically.

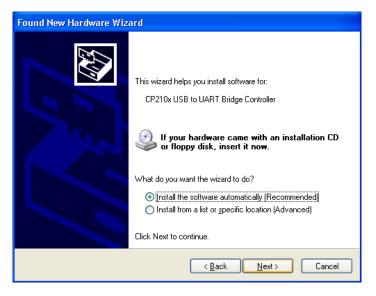

Now the BT-210 USB to UART Controller and Virtual

©2008 Amp'ed RF Inc 9/30/08 1722 Ringwood Ave, Suite 250, San Jose, CA 95131, USA www.ampedrf.com



COM port driver is installed.

Amp'ed RF, Inc. (phone) 408 213-9530 (fax) 408 213-9533




Step 3

The "Found New Hardware Wizard" will now open again in order to install the USB device driver.

Select **YES** to locate the drivers from the Microsoft website.



You will now see the following message.

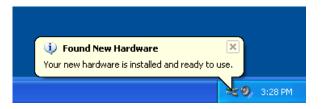

Amp'ed RF, Inc. (phone) 408 213-9530 (fax) 408 213-9533



Step 4

You may open the Windows Device Manager application to verify correct installation, and see which COM port has been assigned to your BT-210 Bluetooth serial device. The BT-210 will usually be assigned the same virtual COM port each time it is inserted (unless you have other virtual COM devices altering port assignments).

You should see the two device drivers for your BT-210 Bluetooth device here

🖳 Device Manager	
<u>Eile A</u> ction <u>V</u> iew <u>H</u> elp	
Computer Computer Disk drives	

The CP2102 chip provides the functionality to use standard UART serial communications from your computer via the Universal Serial Bus, and interfaces directly to our Bluetooth module inside the BT-210 Bluetooth serial adapter.